


Cafitesse 300

Next Generation

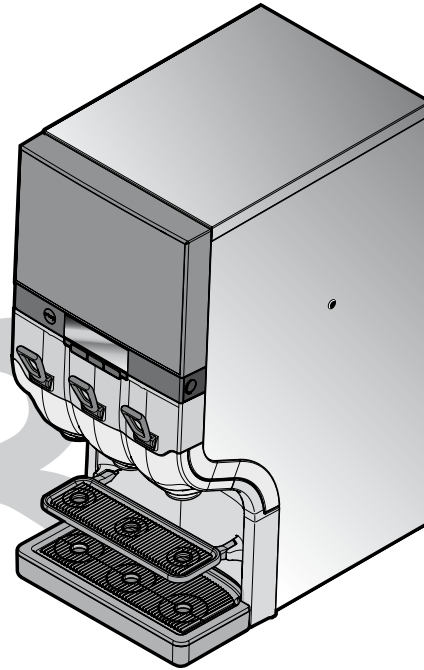

Operator manual
Mode d'emploi
Instrucciones de uso

English

Français

Español

DRAFT

Copyright 2011 © Sara Lee International Foodservice, Netherlands

The English version is the original version of the operator manual.
Other languages are translations of the original operator manual.

La version en langue anglaise est la version originale de ce mode d'emploi.
Les autres langues sont des traductions du mode d'emploi original.

La versión en inglés es la versión original de las instrucciones de uso.
Otros idiomas son traducciones de las instrucciones de uso originales.

TABLE OF CONTENTS

1 Introduction	4	6 Display messages and trouble shooting	24
About the dispenser	4		
About this operator manual	4	7 Technical specification	27
2 Safety instructions	5	8 Options	29
General	5	Software options	29
Installation	6	Hardware accessories	29
Transport, storage and operation ..	7	9 Index	33
Servicing the dispenser	7	Cleaning procedure	34
Food safety instructions (HACCP) 8			
3 Components of the dispenser.. 11			
Front of the dispenser	11		
Rear of the dispenser	12		
Handles in cleaning mode	12		
Icons on the display	13		
4 Operating the dispenser	14		
Place cups and pots correctly	14		
Drink delivery	14		
Inserting and removing product packs	15		
Switching on the dispenser	17		
Switching off the dispenser	18		
Locking/unlocking the dispenser ..	19		
5 Cleaning the dispenser	20		
Cleaning procedures	20		
Clean & Flush	20		
Flush	22		
Manual daily cleaning	23		

1 INTRODUCTION

About the dispenser

The Cafitesse 300 is a dispenser for the delivery of coffee, decaf and only hot water in commercial sectors.

The dispenser functions using special disposable product packs. These patented „Bag-in-Box“ (BIB) product packs contain high quality liquid drink concentrate for drink production. The dispenser can hold two product packs.

The drinks can be dispensed into cups and pots of various sizes.

Optionally you can request your Cafitesse system supplier to equip your dispenser

- with a height extension foot for the delivery into larger pots and airpots (see „Options“)
- with a one line cold water valve for the delivery of cold water (see „Options“)
- with a three line cold water valve for the delivery of cold drinks and cold water (see „Options“)
- with a door lock to prevent unauthorized access to the dispenser (see „Options“).

- with a drainage foot to connect the drip tray directly to the sewer or a drain tank (see „Options“)
- with a high flow option for a high speed drink delivery (see „Options“)
- with a low flow option for a low speed drink delivery (see „Options“)

These options are not available in all markets.

About this operator manual

This operator manual describes the main applications and functions of the dispenser. Before starting to use the dispenser, please read this operator manual to ensure that you have understood the operation of the machine and the safety instructions.

You will find the following symbols throughout this operator manual, please pay attention to them:



Note:

Additional information which may be helpful during the dispenser operation.



Caution:

Information to which you should pay careful attention in order to ensure food safety, to prevent personal injury or damage to the dispenser.



Warning:

Dangers that can result in severe personal injury, death and/or severe damage to the dispenser.



Danger:

DANGERS THAT WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

2 SAFETY INSTRUCTIONS

General

Please read the instructions in this operator manual carefully before using, cleaning or moving the dispenser. Ensure that you and all other persons who operate, clean or move the dispenser are familiar with, and act according to the safety and hygiene aspects of the dispenser.

You may only use the dispenser according to the instructions in this operator manual for the delivery of drinks. The manufacturer is not liable for any damage or injury resulting from improper use of the dispenser or from non-compliance with the procedures described in this operator manual.

- The installation, servicing, repair and programming of the machine may only be carried out by an authorised and appropriately trained service technician assigned by your Cafitesse system supplier.
- Only use original spare parts for the operation of the dispenser.
- The operation, filling and cleaning of the dispenser may only be carried out by authorised and trained personnel.

- The dispenser is not suitable for outdoor use.
- The dispenser must be installed where it can be supervised by trained personnel.



Warning:

The liquids delivered by the dispenser are hot!

Avoid scalding!

Keep hands and other body parts away from the dispenser while drinks are being dispensed and during the rinsing program.



Warning:

Do not place cups, pots, or containers filled with hot liquids on top of the dispenser. There is the risk of being scalded, in case the cups/pots/containers fall down.



Warning:

Keep sufficient space around the dispenser to get away easily in case of hot liquid splashes.



Warning:

This dispenser is not intended for use by persons (including children) with limited physical, sensory and mental faculties, or persons with insufficient experience and/or knowledge of the dispenser.

This does not apply if they are supervised by a person responsible for their safety or have received instructions on how to use the dispenser. Children should be supervised to ensure that they do not play with the dispenser.



Warning:

Place the dispenser on a table or counter with a minimum height of 60 cm/24 in to avoid that young children can use the delivery handle.



Caution:

Check and empty the drip tray of the dispenser regularly to avoid the risk of being scalded and to avoid a wet floor (slip danger) when (hot) liquids spill out of the drip tray.


I 2 SAFETY INSTRUCTIONS

Installation


The installation and programming of the dispenser may only be carried out by authorised and appropriately trained service technicians assigned by your Cafitesse system supplier.


The dispenser is designed for installation indoors on a stable surface such as a table or counter.

- When setting up the dispenser, ensure there is a clearance of approximately 5 cm / 2 in between the dispenser and the wall.
- Protect the dispenser against frost, rain and direct sunlight.
- Protect the dispenser against running water, splashes, spray or steam, heat and heavy dust.

Warning:
 **The dispenser may not be cleaned using a water jet and is not suitable for installation on a surface where a water jet may be used in the vicinity (e.g. for cleaning purposes).**

- Ensure that there is sufficient space around the dispenser for ventilation.
- Keep the front and rear of the dispenser accessible for cleaning and servicing.
- Connect the dispenser to the drinking water supply in compliance with local regulations.


Caution:
 Only hose sets as per EN 61770 may be used to connect the water supply.

Caution:
 If you intend to use the dispenser to deliver cold drinks, please check the drinking water quality beforehand to ensure that you obtain cold drinks that pose no health risks.

- Connect the dispenser according to local regulations to a secured electric circuit.

If you connect the dispenser to a plug in the wall, then:

- Use a grounded safety socket in compliance with local regulations.
- Ensure that the electric circuit is protected by a residual current device.
- Ensure that the plug remains accessible after installation.

Warning:
 **Never touch the power source or plug if your hands, the power cord or socket are wet.**

If you connect the dispenser to a permanently wired power source (without mains plug), then ensure that the electric circuit is equipped with a circuit breaker with a contact gap of minimum 3 mm / 0.12 in that controls all poles.

Transport, storage and operation

Always store and transport the dispenser in the original packaging. Before storing or transporting the dispenser:

- Place the product packs in the refrigerator.
- Clean the dispenser.
- Contact your Cafitesse system supplier so that an authorised and trained service technician can drain the water from the boiler and protect the dispenser against frost damage.



Warning:

The dispenser may not be subject to frost during operation, storage or transport.

If you suspect there is frost damage following storage or transport, contact your Cafitesse system supplier to have the dispenser checked and a function test implemented.

Servicing the dispenser

The servicing, repair and programming of the dispenser may only be carried out by authorised and appropriately trained service technicians assigned by your Cafitesse system supplier.



Warning:

If the mains cable of the dispenser is damaged, switch the dispenser off and contact your Cafitesse system supplier to have the mains cable replaced.

I 2 SAFETY INSTRUCTIONS

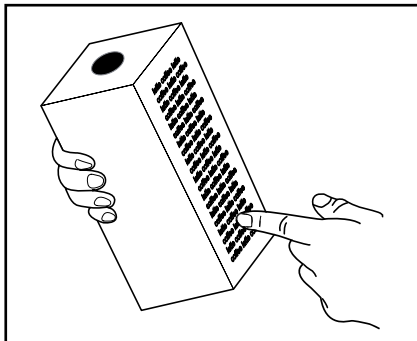


Fig. 1

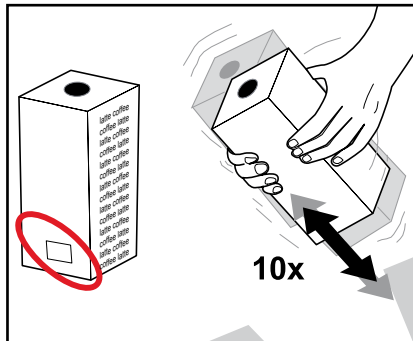


Fig. 2

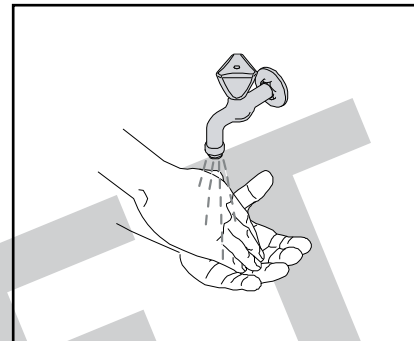


Fig. 3

Food safety instructions (HACCP)

As the operator of the dispenser, you are responsible for its safe and hygienic operation. Please comply therefore with the following instructions in order to meet the food safety standards.

Storage of product packs

- Store the product packs according to the description on the packaging (fig. 1).
- Please note the „Best before“ date printed on the packaging (fig. 2).

- Always use the product packs according to the „first in -first out“ principle (product packs stored first must be used first).
- Do not use a product pack if the „Best before“ date has expired.

Handling the product packs

1. Wash your hands before touching a product pack (fig. 3).
2. Shake the product pack at least 10 times before inserting it in the dispenser (fig. 2).
3. Read the instructions on the rear of the pack.
4. Check the product pack for any damage. Never use a damaged product pack.
5. Check the „Best before“ date on the label of the product pack. Do not use a product pack if the „Best before“ date has expired.

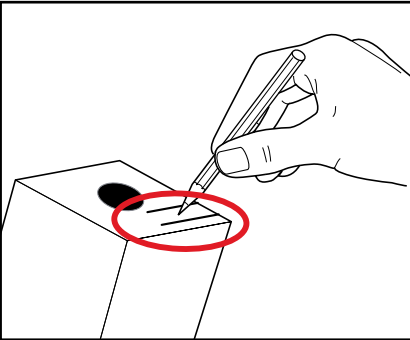


Fig. 4

6. Follow the instructions on the product pack. Write at least the expiry date on the product pack (fig. 4).

**Note:**

When the product pack is open, ensure that no liquid spills out onto clothing, the floor or other equipment.

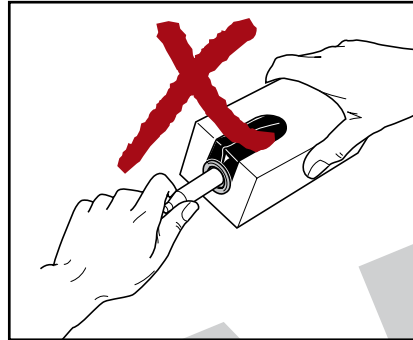


Fig. 5

**Caution:**

Do not touch the tip of the doser with your hands or the cleaning cloth. If the doser needs cleaning, rinse with clear water only (fig. 5).

If you do not use the dispenser for a longer period (e.g. during a company holiday), follow the instructions in the chapter „Switching the dispenser on/off“.

I 2 SAFETY INSTRUCTIONS

Cleaning the dispenser

Clean the dispenser regularly

1. Clean the surface around the dispenser.
2. Wash your hands before touching the dispenser or a product pack.
3. Clean the dispenser according to the instructions in the operator manual (see chapter „Cleaning the dispenser“).
4. During cleaning, check the „Best before“ and „Expiry“ dates on the product pack in the dispenser. If the „Best before“ or „Expiry“ date is expired, replace the product pack.
5. Schedule cleaning activities and record them.



Caution:

Clean all dispenser parts that come into contact with the product with a cleaning agent. Only use cleaning agents recommended by the food industry and your Cafitesse system supplier. For safe handling, dosing and use of cleaning agents, follow the instructions on the label of the cleaning agent.



Danger:

DO NOT SPRAY OR SPLASH THE DISPENSER WITH WATER. DO NOT USE A WATER JET FOR CLEANING. NEVER IMMERSE THE DISPENSER IN WATER.



Danger:

NEVER TILT THE DISPENSER TO CLEAN BEHIND OR BELOW IT. AVOID SCALDING! THE BOILER CONTAINS VERY HOT WATER THAT CAN SPILL OUT IF YOU TILT OR MOVE THE DISPENSER.

Training

Train new staff regarding food safety instructions (HACCP).

- Inform new staff about schedules and cleaning procedures.
- Ensure that new staff reads the operator manual before operating the dispenser. Keep the operator manual close to the dispenser.

If there are any other questions, please contact your Cafitesse system supplier.

3 COMPONENTS OF THE DISPENSER

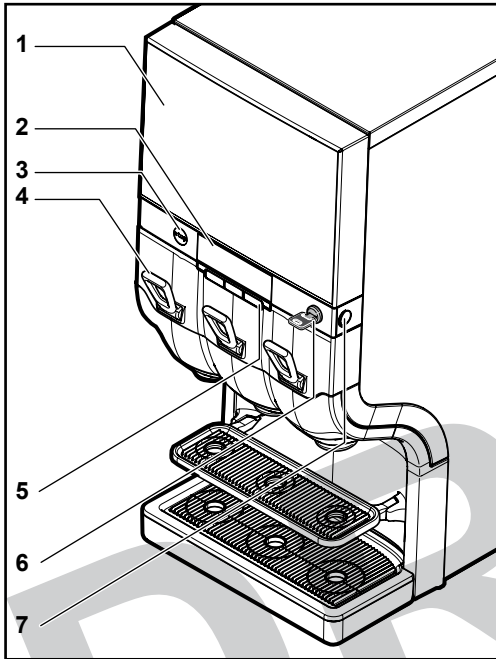


Fig. 6

Front of the dispenser:

- 1 - Dispenser door
- 2 - Display
- 3 - STOP-button
- 4 - Delivery handles
- 5 - Preselection buttons (options)
- 6 - Door lock with key (option)

2012 - 08

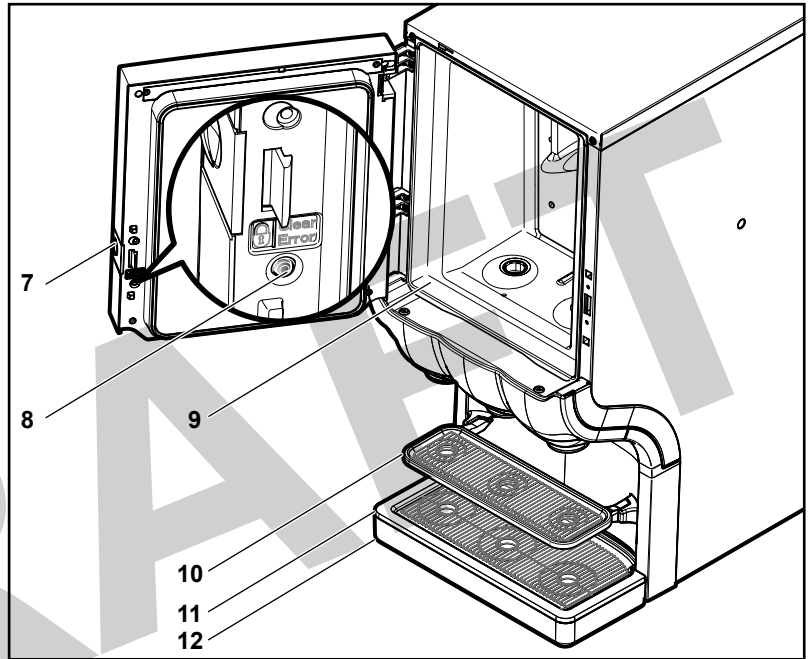


Fig. 7

- 7 - Door release button
- 8 - **LOCK**/Clear-Error switch
- 9 - Cooling compartment
- 10- Cup tray
- 11- Drip grid
- 12- Drip tray

I 3 COMPONENTS OF THE DISPENSER

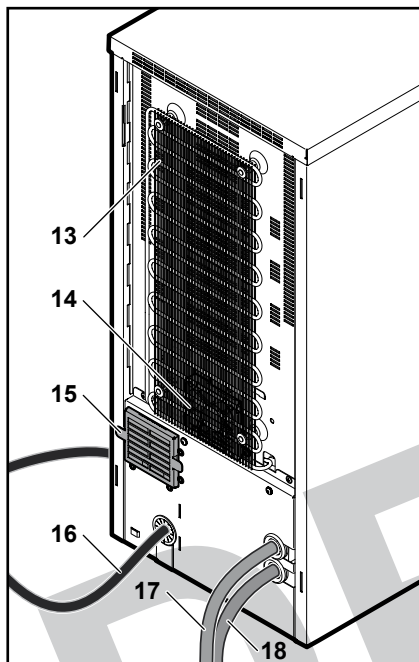


Fig. 8

Rear of the dispenser:

- 13- Condensate grid
- 14- Fan
- 15- Air filter
- 16- Power cord
- 17- Water supply hose
- 18- Water supply hose for cold drinks/
cold water (option)

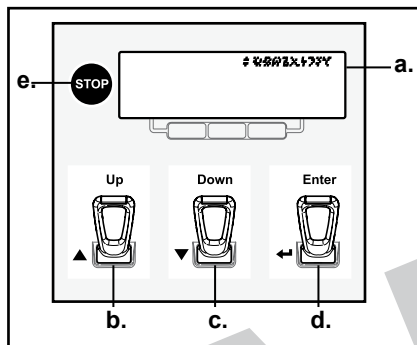


Fig. 9

Handles in 'Clean & Flush' mode (fig. 9):

- a. Display
- b. Handle ▲, 'UP' -
scroll up or increase input values
- c. Handle ▼, 'DOWN' -
scroll down or decrease input values
- d. Handle ←, 'ENTER' -
for confirmation or activation
- e. STOP button

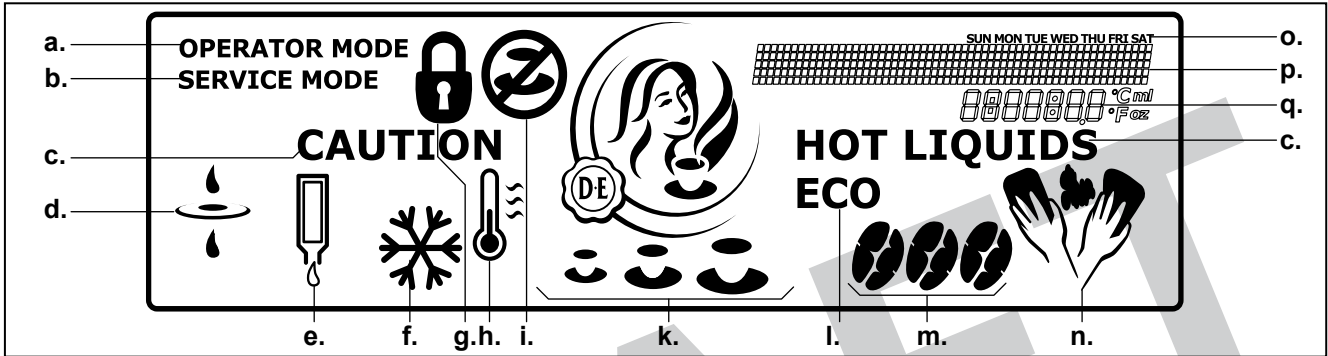


Fig. 10

Icons on the display:**a. OPERATOR MODE**

the USB operator stick is inserted and the operator mode is active

b. SERVICE MODE

the service mode is active

c. CAUTION HOT LIQUIDS

the dispenser delivers hot water or hot drinks or the dispenser is flushed

d. FILTER

replace the water filter

e. PRODUCT PACK left or/and right

insert a full product pack left or/and right

f. ICED-preselection (option)

dispense a drink as cold drink

g. LOCK

the dispenser is locked and cannot dispense drinks

h. TEMPERATURE

water temperature in the boiler is too low and the dispenser is heating up

i. DELIVERY BLOCKED

the dispenser cannot deliver the selected drink

k. VOLUME-preselection (option)

select a small, medium, or large drink

l. ECO

the energy saving mode is active

m. STRENGTH-preselection (option)

select a mild, normal or strong drink

n. CLEANING

the dispenser needs to be cleaned

o. WEEKDAYS

Messages are displayed to guide you through the programming steps, or in case of errors

p. MESSAGE-line

display of cooling compartment temperature, time, etc.

q. INFO-field

4 OPERATING THE DISPENSER

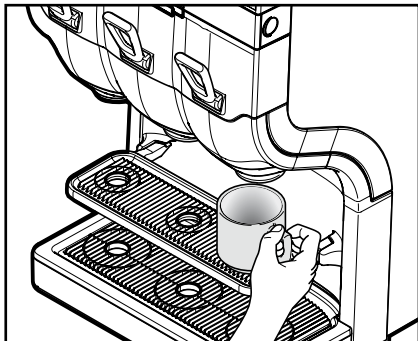


Fig. 11

Place cups and pots correctly

The dispenser is equipped with three product outlets:

- Left: for coffee or decaf
- Center: for hot water
- Right: for coffee or decaf



Caution:

Hot water and drinks are delivered via the outlet below the corresponding delivery handle. Place your cup or pot under the outlet of your drink selection.

- Place your cup on the cup tray (fig. 11).
- Tilt the cup tray upwards to provide enough room for a pot (fig. 12).

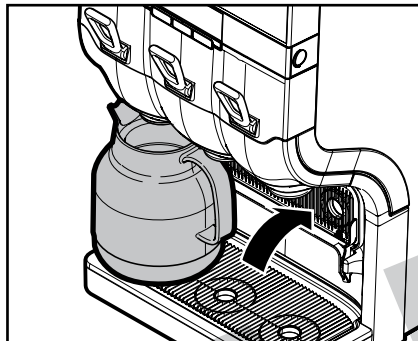


Fig. 12

- Place the pot on the drip tray (fig. 12).

A special dispenser foot may be required for larger pots.

Drink delivery

Warning:

The liquids dispensed by the dispenser are hot!
Avoid scalding!
Keep hands and other body parts away from the dispenser while drinks are being delivered.

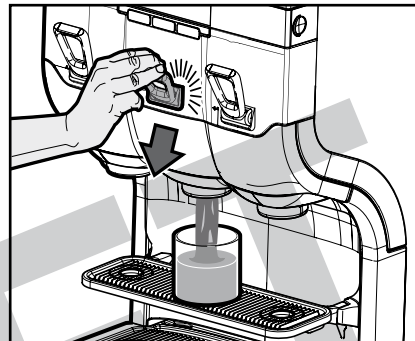


Fig. 13

Warning:

Never leave children unsupervised near the dispenser.

To deliver a drink:

1. Place your cup on the cup tray (fig. 11).
2. Pull the delivery handle of your choice (fig. 13).
The drink will be delivered via the corresponding outlet as long as you pull the delivery handle.
3. Release the delivery handle if you want to stop the drink delivery.

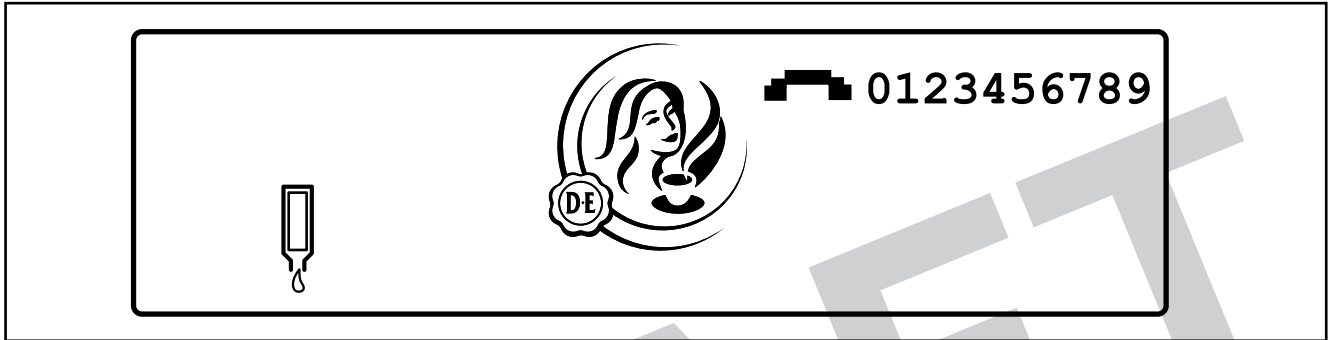


Fig. 14

Inserting and removing product packs

Empty product pack detection

If you select a drink and the corresponding product pack is empty, the drink will not be delivered. The icon for empty product pack will be shown on the display (fig. 14).

If only one of the two product packs is empty, the dispenser can still deliver drinks from the other product pack.

With two empty product packs the delivery of hot or iced water is still possible.



Note:

The service technician can customise your dispenser to display a telephone number of your choice in the message line.

The following text will scroll in the message line:

COFFEE NOT AVAILABLE
☒ 123456789

Call the operator when necessary.

I 4 OPERATING THE DISPENSER

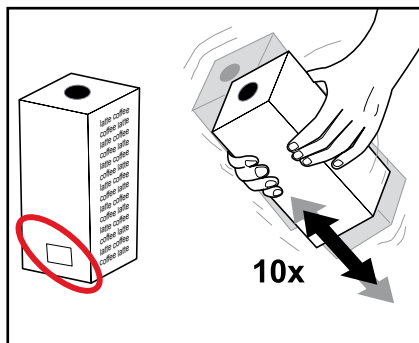


Fig. 15

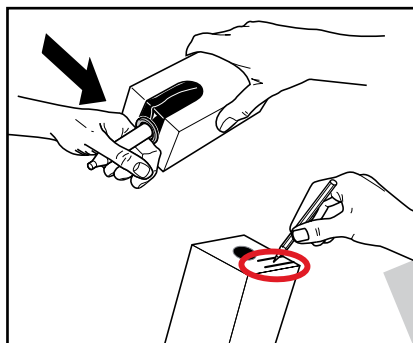


Fig. 16

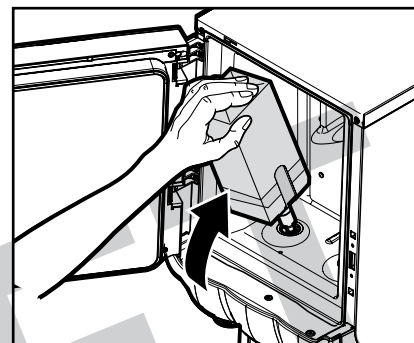


Fig. 17

Replacing an empty product pack

- Caution:** Before inserting a new product pack, follow the instructions in chapter „Food safety instructions (HACCP)“.
1. Wash your hands before touching a product pack.
 2. Do not use a frozen product pack.

- Caution:** Read the instructions on the product pack. Never use a damaged product pack. Do not use a product pack if the „Best before“ date has expired (fig. 15).

3. Shake the product pack at least 10 times (fig. 15).
4. Remove the plastic wrapper and write the „Expiry date“ on the product pack (fig. 16).
5. Follow the instructions on the product pack to open the doser (fig. 16).

6. Open the dispenser door.
7. Insert the product pack (fig. 17).
8. Close the dispenser door.
9. Dispense a test drink.

Switching on the dispenser



Caution:

Ensure, that the dispenser is connected to the water supply.

1. Open the water tap.
2. Insert the power plug.

The dispenser starts heating up water and starts cooling down the cooling compartment. Drink delivery will be blocked until the water in the boiler has reached the correct temperature.

A flashing thermometer and the icon for „Delivery blocked“ will be shown on the display:



Note:

Depending on the dispenser model (see „Technical Specifications“) and the ambient temperature, the heating of the boiler can take between 30 and 120 minutes. The cooling of the product compartment can take 24 hours or more.

Once the water has reached the preset temperature, the display shows the animated symbol illustrated below. The dispenser is now ready for operation.



Note:

 
If the dispenser has been shut down for longer periods, the date and time must be set, so that the dispenser and the programmed cleaning cycles are reactivated.

The date and time settings are shown on the display. The option «MONTH» is active and flashing:



1. Pull the handles ‚UP‘/‚DOWN‘ ▼▲ to select the correct month (JAN - DEC).
2. Pull the handle ‚ENTER‘ ◀ to confirm.


The option «MONTH» stays lit and the option «DAY» starts to flash:



3. Pull the handles ‚UP‘/‚DOWN‘ ▼▲ to select the correct day (1-31).
4. Pull the handle ‚ENTER‘ ◀ to confirm.

I 4 OPERATING THE DISPENSER

 The option «DAY» stays lit and the option «YEAR» starts to flash:




5. Pull the handles ,UP'/'DOWN' ▼▲ to select the correct year.
6. Pull the handle ,ENTER' ← to confirm.

The option «YEAR» stays lit and the option «HOUR» starts to flash:



7. Pull the handles ,UP'/'DOWN' ▼▲ to select the correct hour.
8. Pull the handle ,ENTER' ← to confirm.

 The option «HOUR» stays lit and the option «MINUTES» starts to flash:



9. Pull the handles ,UP'/'DOWN' ▼▲ to select the correct minutes.
10. Pull the handle ,ENTER' ← to confirm.

After a short time, the new settings for date and time will be displayed continuously (without flashing) on the display:



Switching off the dispenser

Please take the following preparations when the machine is not to be used for a long period, e.g. holidays:

1. Remove the product pack and check the „Expiry” date.
 - Store the product pack in a refrigerator until you switch the dispenser back on again.
 - When the expiry date has passed, throw the product pack away.

 **Warning:**
Do not freeze product packs.

2. Clean and flush the dispenser.
3. Pull the power plug out of the socket.
4. Close the water tap.

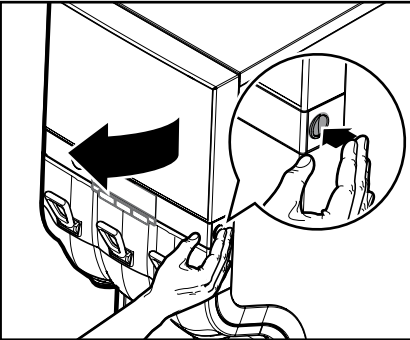


Fig. 18

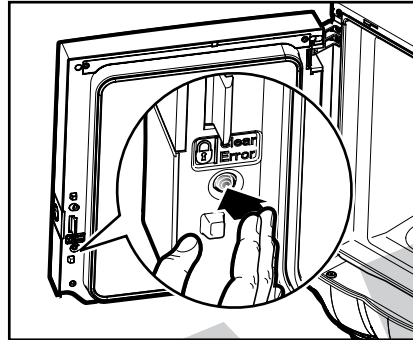


Fig. 19

Locking/unlocking the dispenser

1. Open the dispenser door (fig. 18).
2. Press the **LOCK**/Clear-Error switch to block the drink delivery (fig. 19).
3. To unlock the dispenser, press the **LOCK**/Clear-Error switch again to enable drink delivery (fig. 19).

The lock icon appears on the display.



 
Drink delivery will be switched off. The cooling compartment and the boiler will remain in operation.

5 CLEANING THE DISPENSER

Cleaning procedures

It is recommended, that you clean your dispenser at regular intervals. There are two optional procedures:

- ‚Clean & Flush‘ the cooling compartment and the drink outlets.



Caution:

It is recommended to carry out the procedure ‚Clean & Flush‘ once a week.

- ‚Flush‘ the drink outlets.

The dispenser is equipped with a built-in timer that will prompt you at least one day a week to ‚Clean & Flush‘.

The service technician can enable or disable the built-in-timer and set the weekday(s) for ‚Flush‘ and ‚Clean & Flush‘ according to your needs.

When is cleaning due?

- You must clean the dispenser when the display indicates that cleaning is required.

The cleaning icon appears in the display:



When is cleaning overdue?

If the dispenser is not cleaned within 24 hours, the drink delivery will be blocked.

The display then shows an icon in the shape of a crossed-out cup:



Start the cleaning program (see next section).

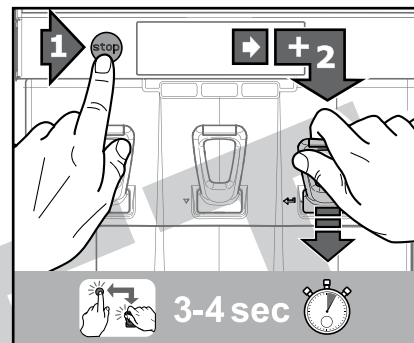


Fig. 20

Start ‚Clean & Flush‘



Caution:

Please note, that the following description is only valid for dispensers without ‚High Flow‘ option.

Please refer to ‚Appendix B - Clean & Flush of High Flow dispensers‘, if your dispenser is equipped with the ‚High Flow‘ option.

1. Press first the STOP button and then pull the handle ‚ENTER‘ ← and hold them simultaneously for 3-4 seconds to enter the cleaning mode (fig. 20).

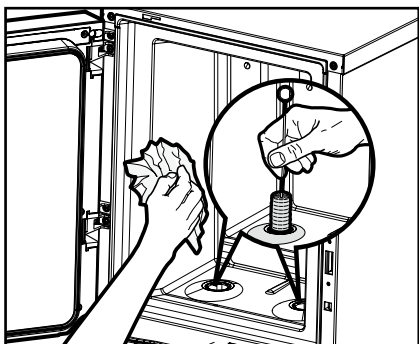


Fig. 21

Follow the instructions on the display:

PLEASE REMOVE ALL PRODUCT PACKS

2. Open the dispenser door.
3. Remove the product packs.

The following message appears on the display:

PLEASE CLEAN THE COOLING INTERIOR AND PUT BACK THE PRODUCT PACKS.



Caution:

Clean all dispenser parts that come into contact with the product with a cleaning agent. Only use cleaning agents recommended by the food industry and your Cafitesse system supplier. For safe handling, dosing and use of cleaning agents, follow the instructions on the label of the cleaning agent.

4. Clean the interior of the cooling compartment (fig. 21):
 - Use a brush wetted with cleaning agent and clean the doser holes in the bottom of the cooling compartment.
 - Dry the doser holes intensely with a clean paper towel.
 - Clean the interior of the cooling compartment thoroughly with a cloth wetted with cleaning agent.
 - Then dry the cooling compartment intensely with a clean paper towel.
5. Insert the product packs.
6. Close the dispenser door.

5 CLEANING THE DISPENSER I

The following message appears on the display:

PLEASE PLACE FLUSH BIN (MIN. 4L). PRESS ↵ FOR OK.

7. Place the flush bin under both product outlets and pull the handle 'ENTER' ↵.



Warning:

The liquids dispensed by the dispenser are hot! Avoid scalding! Keep hands and other body parts away from the dispenser.

The following message appears on the display:

PRESS ↵ TO FLUSH

8. Pull the handle 'ENTER' ↵ to start the flushing process.

The flush process starts (see fig. 22 on the following page):

- a. CAUTION sign
- b. Shows the progress of flushing

After flushing is complete, the dispenser is ready for operation.

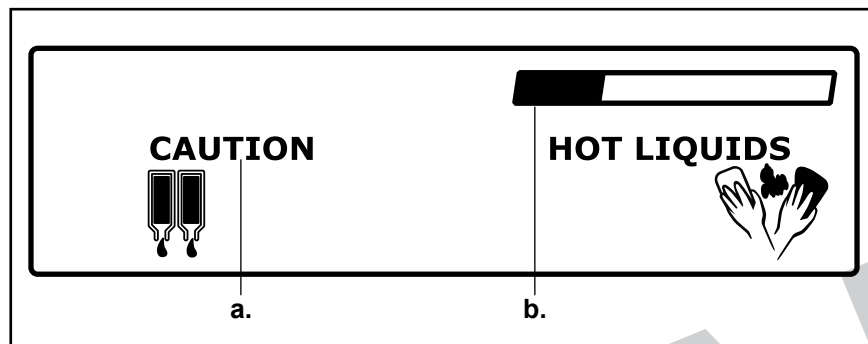


Fig. 22

Flush

According to your own needs, the service technician can optionally set weekdays for 'Flush' in the built in timer.

In this case, the icon for cleaning appears on the display on the set weekday and you can then start flushing.

You can carry out the 'Flush' procedure at any time you like.

Start the 'Flush' procedure

1. Press first the STOP button and then pull the handle 'ENTER' and hold them simultaneously for 3-4 seconds to enter the cleaning mode.

Follow the instructions on the display (see also page 21):

**PLEASE PLACE FLUSH BIN
(MIN. 4L). PRESS FOR OK.**

2. Place the flush bin under both product outlets and pull the handle 'ENTER' .



Warning:

The liquids dispensed by the dispenser are hot! Avoid scalding! Keep hands and other body parts away from the dispenser.

The following message appears on the display:

PRESS TO FLUSH

3. Pull the handle 'ENTER' to start the flushing process.

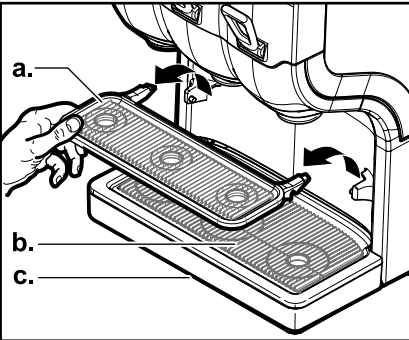


Fig. 23

Manual daily cleaning of external parts

1. Open the dispenser door and press the **LOCK**/Clear-Error switch to set the dispenser to locked mode.

Note:
This avoids to dispense drinks or hot water accidentally when cleaning the external parts.

2. Remove cup tray (a.), drip grid (b.), and drip tray (c.), (fig. 23)
3. Empty the drip tray.

Note:
Check and empty the drip tray at regular intervals.

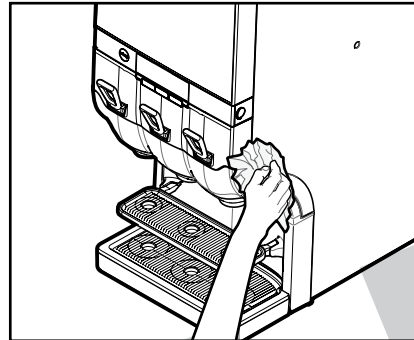


Fig. 24

4. Clean the external parts with a damp, clean cloth and rinse off with clear water.
5. Put the cup tray, drip grid and drip tray back into place.
6. Wipe down the exterior of the dispenser with a damp and clean cloth (fig. 24).

Note:
The parts can also be cleaned in a dishwasher.

Note:
Comply with the safety instructions and the cleaning instructions on the cleaning agent packaging.

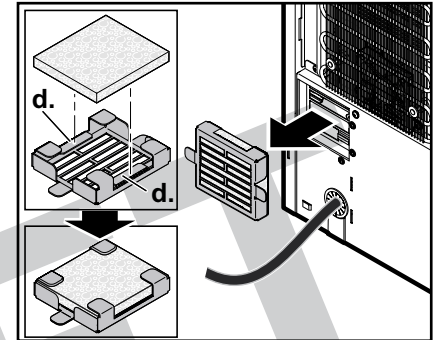


Fig. 25









Cleaning of the air filter





Clean the air filter in regular intervals depending on the ambient conditions to enable a constant cooling function.

1. Pull the air filter and the support out of its position, and remove the air filter (fig. 25).
2. Wash the air filter with water and some cleaning agent, and soak it with clear water.
3. Insert the dry air filter into the support, and re-insert both parts.



Note:
Insert the air filter in plane position on brackets (d.), (fig. 25).

7 DISPLAY MESSAGES AND TROUBLE SHOOTING

Display messages	Cause	Action
 0123456789  	<p>One or two product packs are:</p> <ul style="list-style-type: none"> • empty • incorrectly positioned • or not present 	<p>Call the operator when the number is shown on the display.</p> <ul style="list-style-type: none"> • Replace the empty product pack(s), see page 16. • Check whether the product pack(s) are inserted correctly, see page 16. • Insert one or two product packs
	<p>The drink delivery is blocked because the dispenser was not cleaned as scheduled.</p>	<p>Start the cleaning program immediately, see page 20.</p>
  PLEASE WAIT BOILER IS HEATING UP	<p>The water in the boiler has not yet reached the preset temperature.</p>	<p>The drink delivery of the dispenser is blocked until the temperature reaches the correct value.</p>
 	<p>The drink delivery is blocked because the LOCK/Clear-Error switch on the dispenser was pressed.</p>	<ul style="list-style-type: none"> • Press the LOCK/Clear-Error switch again to unlock the dispenser, see page 19.

Display messages	Cause	Action
 0123456789 	The dispenser must be cleaned.	<ul style="list-style-type: none"> • Call the operator when the number is shown on the display. • Start the cleaning program on the same day, see page 20.
 ECO	The drink delivery is blocked because the energy saving mode of the dispenser is switched on.	<ul style="list-style-type: none"> • Pull a delivery handle. The boiler temperature increases and the drink is dispensed as soon as the correct temperature is reached. The energy saving mode becomes active again 10 minutes after the boiler was heated up or the last drink was dispensed. • If the service technician has set an end date, the energy saving mode ends automatically.
	The water filter of the dispenser must be replaced.	Replace the water filter.

I 6 DISPLAY MESSAGES AND TROUBLE SHOOTING

Display messages	Cause	Action
 0123456789 <i>Err 19</i>	Error water system:	<p>Check the water supply line to the dispenser is blocked, open the water tap completely.</p> <p>Press the LOCK/Clear-Error switch.</p> <p>Contact service, if the error persists.</p>
 0123456789 <i>Err 30</i>	Errors cooling:	<p>Check the ventilation and the ambient temperature of the dispenser, and clean the ventilation grid, if necessary.</p> <p>Press the LOCK/Clear-Error switch.</p> <p>Contact service, if the error persists.</p>
Water leaks from the hot water outlet or a product outlet.	Scale particles block the respective outlet valve, it cannot close completely.	<p>Perform the program ,Flushing'.</p> <p>Contact service if the problem persists.</p>
The dispenser does not respond to pulling a delivery handle or pressing another button	A software jam has occurred.	<p>Reset the dispenser:</p> <p>Disconnect the power supply and connect again after 5 seconds.</p> <p>Contact service if the problem persists.</p>

8 TECHNICAL SPECIFICATION

Technical Specifications

Cafitesse 300

Dispenser versions	Standard version hot drinks - cup & pot delivery Café Cool version hot and cold drinks - cup & pot delivery
Dimensions	
Height	770 mm / 30.3 in
Width	350 mm / 13.8 in
Depth	522 mm / 20.6 in
Weight	
empty	36.5 kg / 80.5 lbs
filled	47.7 kg / 105.2 lbs
Maximum cup/pot height	Cups: 117 mm (4.6 in) using the cup tray Pots: 210 mm (8.3 in) with cup tray folded Pots: 260 mm (10.2 in) without drip tray Air pots: 33 cm (13.4 in) when using the optional air pot extension (see „Options“))
Ingredient capacity	2 disposable Bag-in-Box (BIB) product packs with a capacity of: 2 litre/0.53 gal, or 1.25 litre/0.33 gal (Use the optional adapters for ingredient packs (see „Options“))
Drink capacity	100 cups at 100 cc (3.3 fl. oz. USA) per hour per kW heating capacity
Standard water connection	1/2" or 3/8" supply line with 3/4" BSP connecting piece Drinking water line with stop valve Max. water inlet temperature 60 °C/140 °F

I 7 TECHNICAL SPECIFICATION

Technical Specifications

Cafitesse 300

Dynamic pressure	Min. 0.8 bar at 10 l/min - 11 psi at 2.6 USgal/min
Static pressure	Max. 10 bar - 140 psi
Boiler capacity	9 litre/2.4 USgal
Hot water connection	Via copper pipes only
Connection water cooling unit:	Dynamic pressure: min. 0.8 bar at 1.2 l/min - 11 psi at 0.7 USgal/min
Refrigerant	0.035 kg of R134a
Electrical specification:	<ul style="list-style-type: none">• By power cord and plug 1.80 m (70.9 in)• Direct power connection according to the Safety Instructions <p>For the connected loads refer to the rating plate.</p> <p>1-phase operation USA: max. 1.8 kW at AC 120V</p> <p>2-phase operation USA: <ul style="list-style-type: none">• max. 9.3 kW at AC 120/240 V• max. 5.8 kW at AC 120/240 V• max. 3.9 kW at AC 120/240 V</p>
Environmental specifications	
Acoustic Emission	The A-weighted sound pressure level of the dispenser is below 70 dB.
Ambient Temperature for installation & operation	Between 5 °C/41 °F and 32 °C/90 °F.
Compliance	UL/cUL, NSF label

The manufacturer reserves the right to change specifications without prior notice.

9 OPTIONS

The features and options listed in this section may not apply in each country. Please consult your Cafitesse system supplier for more information.

Software options

On customer demand the service technician can enable or disable specific functions of your dispenser. For example:

- Alternative settings for drink recipes, varieties, strength or cup volume.
- Set the dispenser to portioned or continuous drink delivery.
- Custom energy saving settings.
- Custom cleaning settings according to your preference.
- Custom settings of operator and service telephone numbers.
- Enable/disable preset selections such as drink strength (mild, normal, strong) or cup size (small, medium, large).

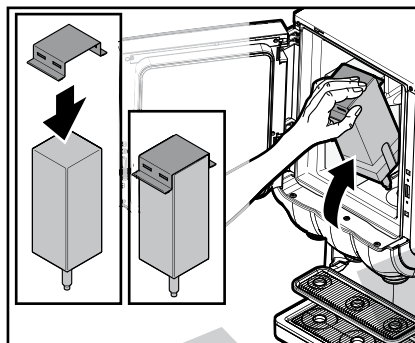


Fig. 26

Hardware accessories

Adapters for small ingredient packs

To use the dispenser with 1.25 l/0.33 gal product packs, your Cafitesse system supplier can provide special adapters to secure the packs into their position (fig. 26).

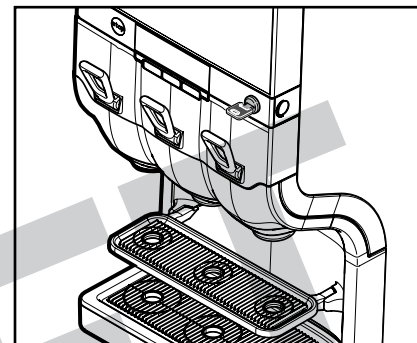


Fig. 27

Door lock

On your request, the service technician can install a mechanical door lock in the dispenser door. In this way an unauthorized access to the dispenser can be prevented (fig. 27).

I 8 OPTIONS

Air pot Extension

To allow the use of large pots like air pots, the service technician can install a special dispenser foot to increase the delivery height of the dispenser outlets to 33 cm (13.4 in).

High flow

To increase the delivery speed of the dispenser the service technician can install the high flow option. Two product packs of the same sort of ingredient have to be inserted. Pulling the left delivery handle the drink is dispensed from the 2 product packs in the dispenser at the same time via the left outlet. The right delivery handle is switched off.

Water cooling unit

For the additional delivery of cold water and cold drinks, the service technician can equip your dispenser with a special water cooling unit.



Caution:

Test the quality of the water supply to ensure delivery of safe cold drinks according to local regulations.

Drainage of the drip tray

To minimize the need for emptying the drip tray the service technician can install a special drainage option to connect the drip tray directly to a sewer or drain tank.

Switch over

To decrease the replacement intervals of the product packs the service technician can install the switch over option. Two product packs of the same sort of ingredient have to be inserted.

Drinks are only dispensed via the left outlet. When the left product pack is empty, drinks are dispensed from the right product pack. The right delivery handle is switched off.

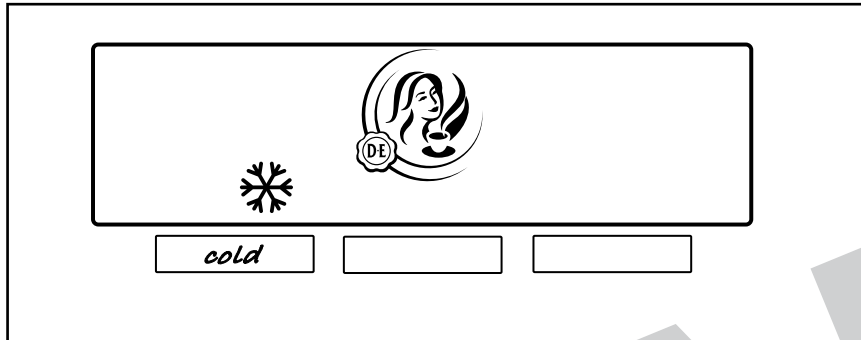


Fig. 28

Cold water and cold drinks

The service technician can equip your dispenser with a special cold water inlet supply for the additional delivery of cold water and cold drinks.



Caution:

Test the quality of the water supply to ensure delivery of safe cold drinks according to local regulations.

For this option the service technician can install the preselection button «COLD ❄️», which provides the possibility to deliver both, hot and cold drinks or water from the same outlet.

Use the preselection button

«COLD ❄️» in the following way:

1. Place your cup on the cup tray.
2. Press the preselection button «COLD ❄️» to activate this preselection. The icon for cold delivery is displayed (fig. 28).
3. Pull the corresponding delivery handle. The cold drink or cold water is delivered.
4. Press the STOP button to return to the default state.

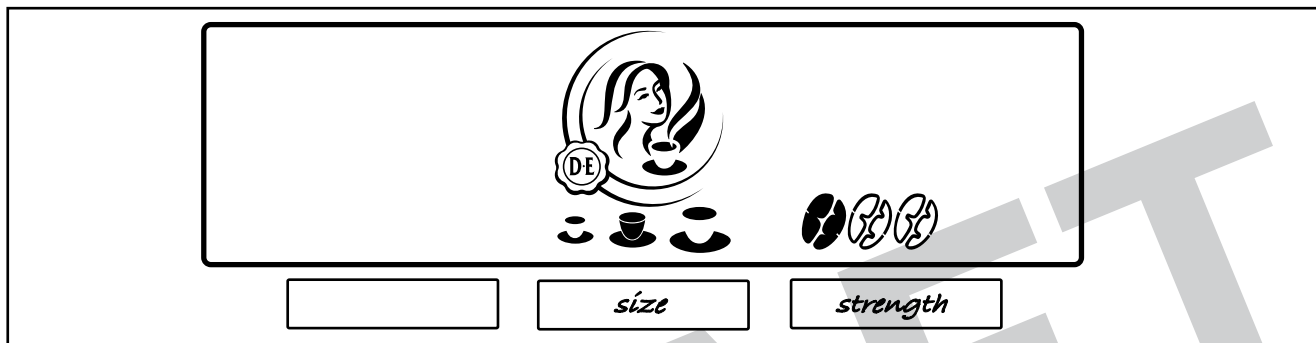



Fig. 29

Pre-selection buttons

Preselection buttons provide the possibility of different drink strength and drink size deliveries. The service technician can adjust strength and size according to your needs.

There are the following preselections:




- **STRENGTH**-preselection:
mild - normal- strong
- **SIZE**-preselection (only for portioned drink delivery):
small - medium - large

Warning:
 **The liquids dispensed by the dispenser are hot! Avoid scalding! Keep hands and other body parts away from the dispenser.**




Use the preselection buttons:


1. Place your cup on the cup tray.

STRENGTH-preselection:

2. Press the preselection button «STRENGTH». Three bean icons are displayed (fig 29).
3. Press the preselection button until the required drink strength is marked in black:
mild  - normal  - strong 
4. Pull the corresponding delivery handle. A drink of the selected strength is dispensed.
5. Wait a few seconds or press the STOP button to return to the default.

SIZE-preselection

2. Press the preselection button «SIZE». Three cup icons are displayed (fig. 29).
3. Press the preselection button until the required portion size is marked in black: small  - medium  - large 
4. Pull the corresponding delivery handle. A drink of the selected portion size is dispensed.
5. Wait a few seconds or press the STOP button to return to the default.

Note:
 All preselections (see also cold option) can be combined with one another.

10 INDEX

A

Air filter, 12, 23
Ambient temperature, 28

B

,Best before' date, 8, 10, 16

C

Clean/Cleaning, 10, 13, 20-25, 34
Cleaning procedures, 10, 20
,COLD' preselection, 31
Cooling compartment, 11, 13, 17, 20-21
Cup tray, 11, 14, 23, 27, 30, 32

D

Date and time, 17
Delivery handle, 11, 14
Dimensions, 27
Display, 11, 13
Drink delivery, 14, 31, 32
Drink strength, 29, 32
Drip grid, drip tray, 5, 11, 14, 23

E

ECO, 13, 25, 29
Energy saving mode, 13
Error, 13, 26
,Expiry' date, 9, 10, 16

F

Fan, 12
Filter (water filter), 13, 25
First in - First out principle, 8
Flush/Flushing, 13, 20-22, 34
Front of the dispenser, 11
Food safety, 4, 8, 10, 16, 23

H

HACCP, 8, 10, 16
Handle ,DOWN', 12, 17-18
Handle ,ENTER', 12, 17-18, 20-22
Handle ,UP', 12, 17-18
Hot water, 4

I

Installation, 6

L

LOCK/Clear-Error switch, 13, 19, 23, 24, 26

M

Manual daily cleaning, 23

O

Options, 4, 29-32

P

Power cord, 6, 11,
Power source, 6
Power supply, 6, 26
Portion size, 32
Preselection button, 31, 32
Product pack, 4, 7-9, 15-19, 27,29

R

Rear of the dispenser, 6, 12
Refrigerator, 7, 19

S

Safety instructions, 4, 5, 8, 10, 16, 23
Setting date and time, 17
Storage, 7, 8
STOP button, 11, 20
,STRENGTH' preselection, 32
Switching on, 17
Switching off, 18

T





Technical specifications, 28,29
Telephone number, 15
Time settings, 17
Transport, 7, 8
Training, 10

W

Water supply, 6, 11, 17, 28
Weight, 27





CLEANING PROCEDURE

CLEANING (weekly)

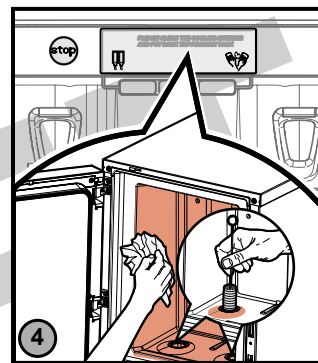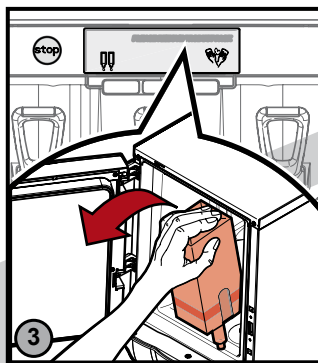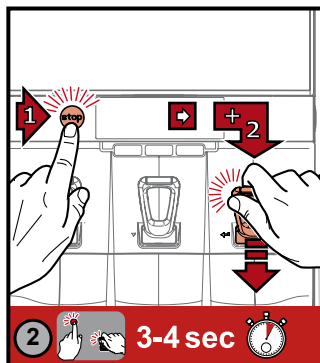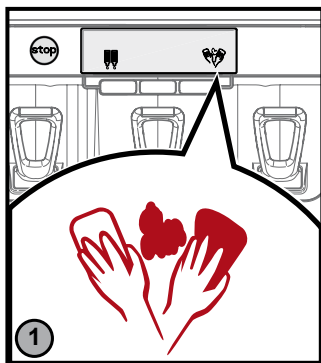

optional

FLUSHING

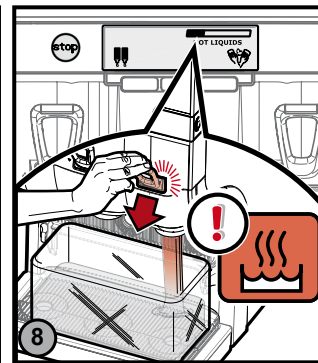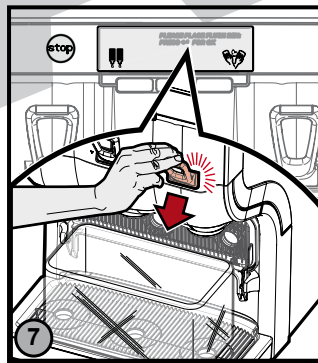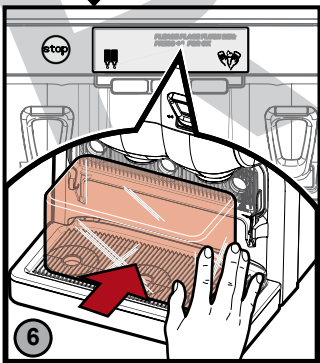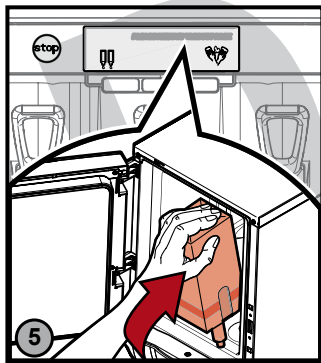

DRAFT

DRAFT

INDEX - APPENDIX

- A** **CLEANING THE WATER TANK (OPTION)**
- B** **CLEAN & FLUSH OF HIGH FLOW DISPENSERS (OPTION)**

DRAFT

APPENDIX A - CLEANING THE WATER TANK (OPTION)

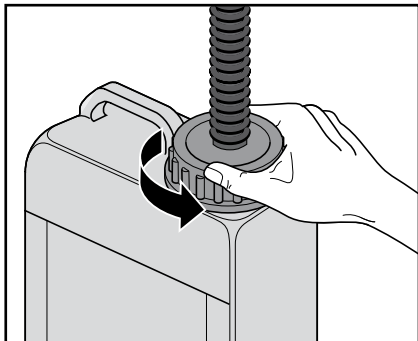


Fig. A1

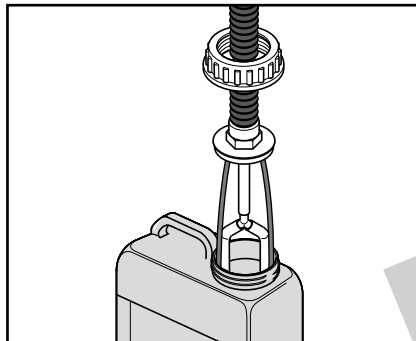


Fig. A2

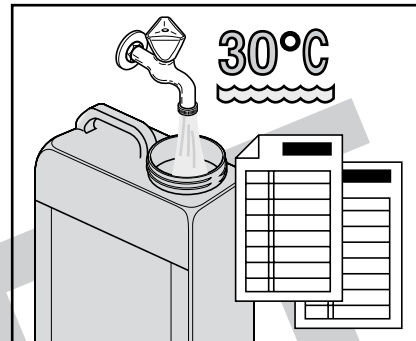


Fig. A3

Cleaning the water tank (option)



Caution:

The water tank must never be subjected directly to sunlight.



Caution:

The kit water tank must only be applied as a temporary and not as a permanent installation.



Caution:

The water tank must be filled with new drinking water every day.



Caution:

The pumps in the tank must always be covered with water.

- Pull the power plug out of the socket.
- Unscrew the closure of the water tank (fig. A1).
- Remove the pump unit (fig. A2).
- Clean the pump unit by means of a soft brush and rinse it several times.
- Empty the water tank, rinse it twice with hot drinking water and fill it with drinking water (19 l).



Caution:

Fill the tank with cold drinking water only (max. 30°C). Observe local regulations regarding the drinking water quality (fig. A3).



Note:

Make sure that the hoses are not bent.

- Insert the power plug and check the correct functioning.

APPENDIX B - CLEAN & FLUSH OF HIGH FLOW DISPENSERS (OPTION)

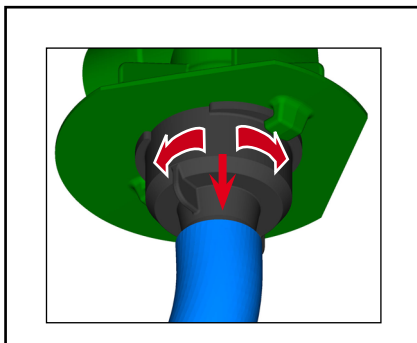


Fig. B1

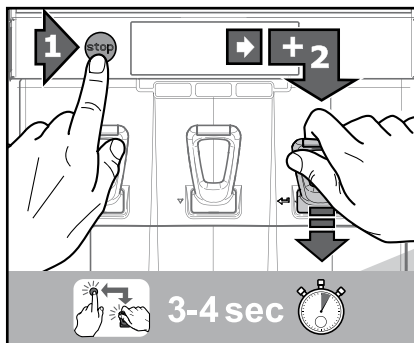


Fig. B2

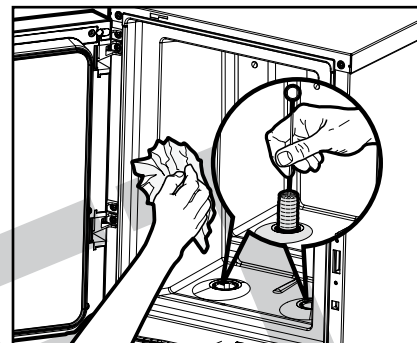


Fig. B3

Clean & Flush of High Flow dispensers (option)

If your dispenser is equipped with the 'High Flow' option, follow the instructions below, when 'Clean & Flush' is due, and the cleaning icon appears in your display.



Caution: Press the LOCK/Clear Error switch to avoid unintended drink delivery, when you remove and insert the outlet hose.

1. Remove the outlet hose and the hose connector with sealing from the drink outlet (fig. B1).

2. Soak the outlet hose, connector and sealing at least 15 minutes in a container with warm water and a cleaning agent.

Caution: Use a cleaning agent approved by the food industry and recommended by your Cafitesse supplier only. Observe the safety instructions and instructions for use on the pack of the cleaning agent.

3. Press first the STOP button and then pull the handle 'ENTER' and hold them simultaneously for 3-4 seconds to enter the cleaning mode (fig. B2).

4. Open the dispenser door and remove the product packs from the cooling compartment.
5. Clean the interior of the cooling compartment (fig. B3):
 - Use a brush wetted with cleaning agent and clean the doser holes in the bottom of the cooling compartment.
 - Dry the doser holes intensely with a clean paper towel.
 - Clean the interior of the cooling compartment thoroughly with a cloth wetted with cleaning agent.
 - Then dry the cooling compartment intensely with a clean paper towel.

APPENDIX B - CLEAN & FLUSH OF HIGH FLOW DISPENSERS (OPTION)

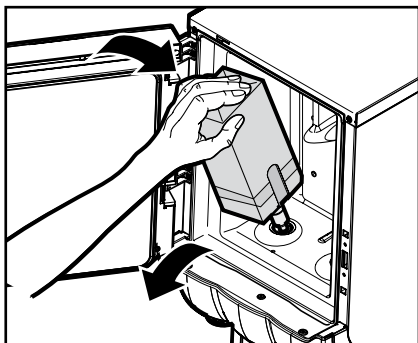


Fig. B4

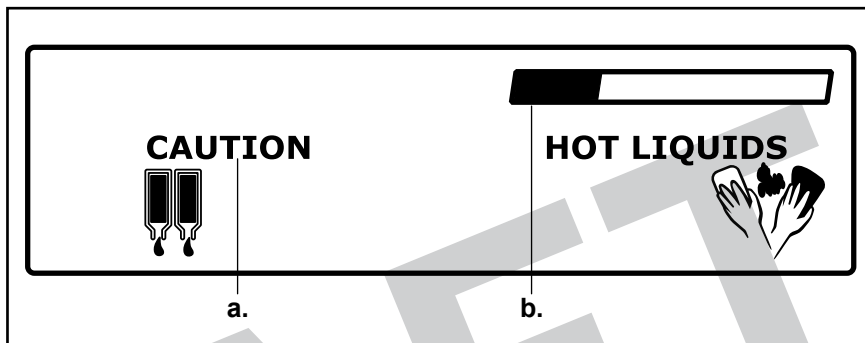


Fig. B5

6. Insert one of the product packs into the cooling compartment and take it out again (fig. B4).

Note:
In this way the cleaning program will be continued. Even if the message on the dispenser display shows a different procedure, the product packs need to be left outside the cooling compartment for the following steps. The door of the cooling compartment needs to stay open.

7. Leave the dispenser door open, place the flush bin under both product outlets and pull the handle 'ENTER' ←.



Warning:

The liquids dispensed by the dispenser are hot! Avoid scalding! Keep hands and other body parts away from the dispenser.

The following message appears on the display:

PRESS ← TO FLUSH

8. Pull the handle 'ENTER' ← to start the flushing process.

The flush process starts (see fig. B5):

- a. CAUTION sign
- b. Shows the progress of flushing

9. Insert both product packs into the cooling compartment and close the door.
10. Rinse the outlet hose, the hose connector and sealing with clear water and dry them with a paper towel.
11. Connect the outlet hose to the product outlet of the dispenser: Insert and turn until you hear a 'click'.

After flushing is complete, the dispenser is ready for operation.



Note:

The 'Flush' procedure can be carried out as described in the corresponding section of the manual.

DRAFT