MINI 2.0 Coffee Appliance
Model: 3A-C276F

User Manual



Overview

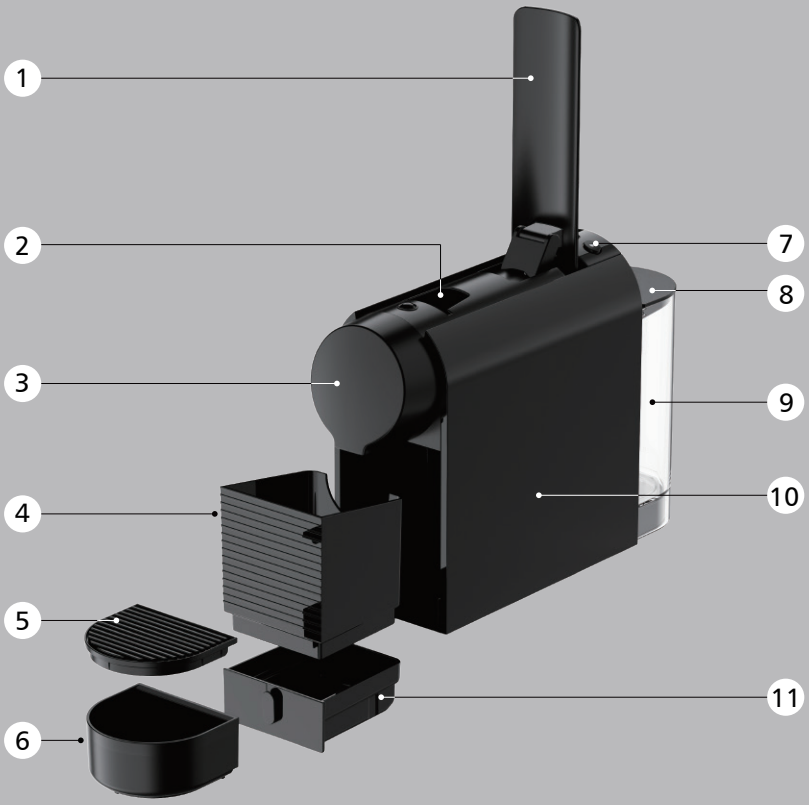


Fig.1: Components

1. Handle
2. Capsule window
3. Coffee spout
4. Used capsule container
5. Drip Tray cover
6. External drip tray
7. Control panel
8. Water Tank cover
9. Water Tank
10. Side Panel
11. Inner drip tray



Fig.2: Control Panel

- A Espresso button
- B Lungo button
- C Hot Water Button
- D Power button

Content

Overview 1

Important Safeguards 4

Instructions For Use 5

User Safety Unpacking Placement 6

How To Use The Machine 7

Regulations 7

Operations 8

Descaling 11

Cleaning 11

Trouble Shooting 12

Dismantling 12

Additional Warnings 13

Specifications 14

Customer Care Service 14

Important Safeguards

Read these instructions carefully before using your new coffee machine for the first time. Keep them in a place where you can find and refer to them later on.

1. In case of an emergence: immediately remove the plug from the power socket.
2. Children can never use the appliance without close adult supervision.
3. Check that the voltage quoted on the rating plate is as same as your mains voltage.
4. Connect your appliance only to an earthed power sockets.

ⓘ NOTE: The use of incorrect connections voids the warranty!

5. Your machine is household use only.
6. Remove the plug from the main socket if you will not be using the machine for an extended time(holidays).
7. Before cleaning and servicing, remove the plug from the main socket and let the machine cool down.
8. Never immerse the machine, cable, or plug in water or any liquid.
9. Keep the cable out of children.
10. Never leave the cable near or in contact with hot parts of the machine, a source of heat, or a sharp edge.
11. Never place the machine on a hot surface, e.g. a heating plate. Never use it around an open flame.
12. Place the machine on a flat, stable, heat resistant surface away from water splashes.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments

This Coffee maker shall not be placed in a cabinet when in use.
Cleaning and user maintenance shall not be made by children without supervision.

Instructions For Use



Read these instructions carefully, because they contain important information about safety of installation, use and maintenance. Keep this booklet carefully for consulting when you need it.

- Before using, check that the mechanical and other parts of the machine are intact. The body of the machine, water tank cover, tank and brewing unit must never be broken or cracked. The sheath and plug of the power cord must never be cracked or broken. If this should occur, disconnect the plug immediately and take the machine to an authorized dealer for checking.
- It is advisable to power the machine using a contact breaker (RCD) with operating current not higher than 30 mA.
- Keep the power cord out of the reach of children.
- Make sure the machine is turned off before plugging it into the socket outlet.
- The electrical safety of this machine is only assured when it is connected to an efficient earth system, in accordance with the safety regulations in force. Have this important requirement checked by a qualified person. The manufacturer cannot be held responsible for damage caused by lack of an earth.
- Before plugging in the machine, make sure that the electric power supply is the same as that of the machine.
- Flying leads or non-approved extensions must not be used for supplying electricity to the machine.
- Before using the machine, remove all protective films from the outside walls of its body.

- The first time the machine is used there might be some smell caused by the insulating materials and the heating elements. This disappears after a few minutes.

ⓘ **NOTE:** Do not leave the machine without water in the tank.

- Never immerse the machine, power cord and plug in water or other liquids.
- Keep the power cord away from the hot parts of the machine.
- While in operation, the power plug must always be easy to get at in case the machine has to be disconnected.
- Do not disconnect the machine by pulling the power cord.
- Do not move the machine while it is working.
- Do not leave the machine while it is working because this machine hasn't automatic stop function.
- Do not use or put the machine out of doors or near water.
- Always unplug the machine each time after using it.

ⓘ **NOTE:** Do not leave the machine in rooms where the temperature is 0°C or lower. If you are planning not to use the machine for a fairly long time, leave no water in the tank.

- This machine must never be used by children, invalids etc. except under strict supervision, nor in any case by people that have not been properly instructed about how to use it and about the dangers of improper use.
- Do not use the machine with bare feet and wet hands.
- Always unplug the power plug before cleaning the machine and before doing any kind of work on it.

User Safety Unpacking Placement

- Remove the machine from its packing and check that all the parts are there and are not broken.
- Place the machine on a flat, even, stable, heat-resistant surface, strong enough to bear its weight.
- Do not install or use the machine near curtains or other flammable material and do not place anything on top of it during use.

- Do not place the machine on top of, or close to, additional oven or other equipment that generates heat (for instance, radiators etc.)
- Make sure there is enough space around the machine for proper ventilation.



Packing materials (cardboard, cellophane, metal staples etc.) could cut or cause injury if not handled carefully or if used incorrectly; keep them out of the reach of children or unskilled persons.

How To Use The Machine

- This machine is designed for making Espresso coffee , solely for household use. It must not be used for other purposes and must not be altered or tampered with for any reason. Use for any other purpose is considered improper and therefore dangerous. The manufacturer cannot be held responsible for any damages resulting from improper, erroneous or unreasonable use.
- Do not touch the hot parts (Coffee nozzle) during using the machine.
- While brewing coffee beware of possible splashes of hot coffee.
- Do not open main lever while brewing coffee.

Regulations


The manufacturer states that the product referred to in this booklet was manufactured in compliance with the Community Directives as shown in the declaration of conformity attached to this booklet.

Operations


ⓘ **NOTE:** Confirm that no accessories are missing and the equipment has not been damaged. Remove all the protective stickers from the machine components and clean the interior parts.

Preparing The Machine


Place the machine on the flat and stable surface. Make sure the used capsule container, the drip tray and the water tank are in the proper positions.

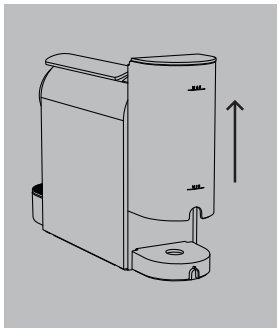

❶ Take out the water tank and fill water for approximately 470ml.

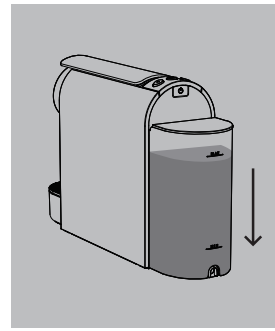


❷ Put back the water tank properly to the machine.

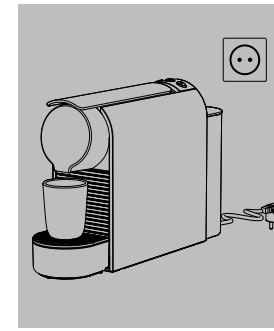


❸ Put the cup on the drip tray. Take out the plug cable and put it into socket.

Staring up for the first time or after a longer period of non-use


Following the steps ❶ ❷ ❸ to prepare the machine. And make sure the handle is down **without capsule in the machine.**

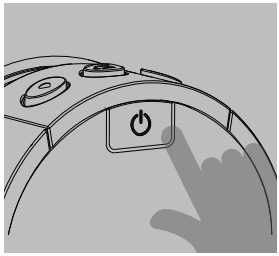

❹a Press the power button or any button to turn on the machine.

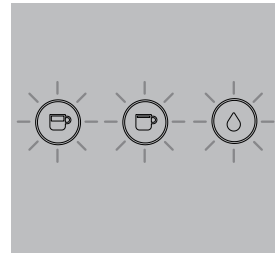


❹b The espresso, lungo, and hot water button start flashing orange at the same time. When the lights are stable orange, the preheating is finished.

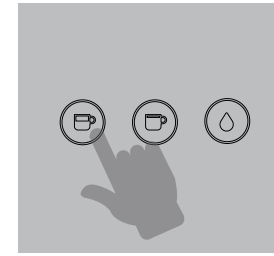


❹c Press the espresso , lungo or hot water button, the water will come out from nozzle. It will stop automatically.

Making Coffee


Firstly following the steps ❶ ❷ ❸ to prepare the machine.
Then following the step ❹a ❹b to turn on the machine.

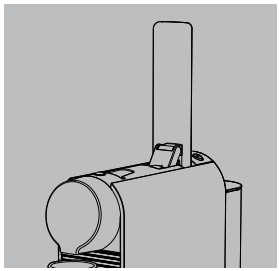

❺ Open the handle and put the capsule into the capsule window.

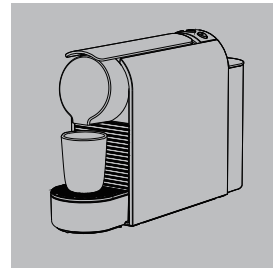


❻ Close the handle.

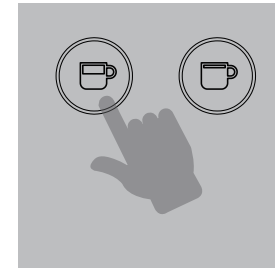

❼ Press the espresso or lungo button, the coffee will come out from nozzle. It will stop automatically.

Making Hot Water

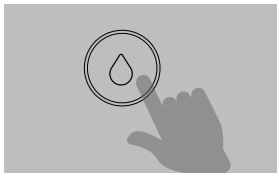


❽ In Ready to Use Mode, press hot water button. The water will come out and it will stop automatically. It can be interrupted or stopped by pressing any of the extraction buttons.

Stand-by


If the machine doesn't work for more than 9 minutes, the machine will automatically power off (all buttons will be off) to save the consumption.

Reset The Factory Default

ⓘ **NOTE:** The espresso default range approx. is 40ml, the lungo default range approx. is 110ml. The hot water default range approx. is 120ml.

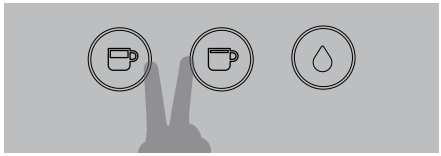


❾a Press both the espresso and lungo buttons over 3 seconds.

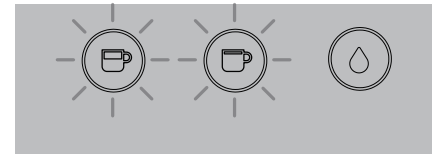


❾b The coffee buttons blink 3 times, it means that the machine is running to the factory default.

Setting Volume


ⓘ **NOTE:** This operation is necessary to make sure the water tank is filled.
ⓘ **NOTE:** The preset amount range for espresso is 10-140ml.
The preset amount range for lungo is 10-280ml.
The preset amount range for hot water is 20-450ml.

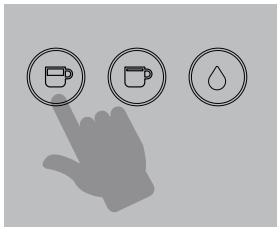

10a Press the espresso , lungo or hot water button over 3 seconds.

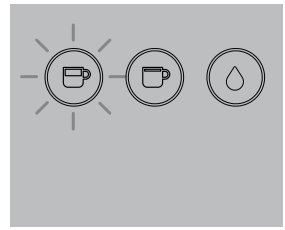


10b The selected button blinks, the coffee or hot water will come out from nozzle.

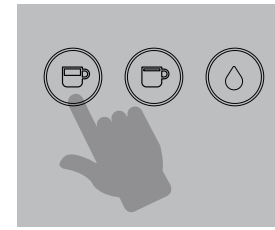


10c When it reaches the volume you want, press the selected button again. The volume is reserved.


Turn off The Machine

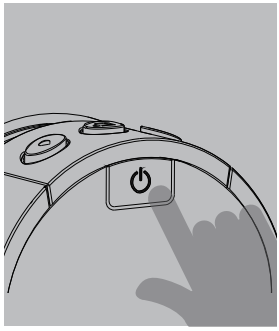

11a Press power button to turn off the machine.

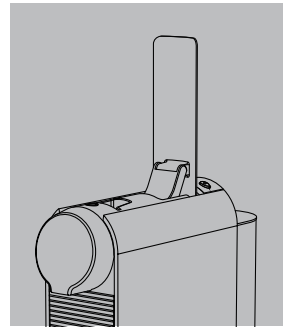

11b After extraction, open the handle. The used capsule will drop to the used capsule container.

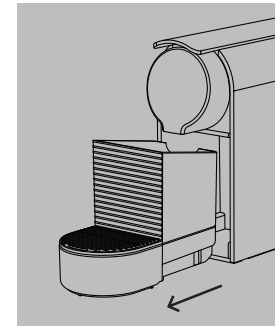

11c Take out the used capsule container and empty it after every 8-10 extractions.

Descaling

It is advisable to descale the appliance every 6 months or so, depending on the frequency of use and the mineral content of your water.


Descale using commercial descaling agents recommended for coffee makers, or use water and vinegar as follows:

- Fill the water tank with straight vinegar (5% solution).
- Operate the appliance, as it making coffee, until the tank is empty.
- After that, rinse the water tank and let or 2 tanks of fresh water flow through the brew head until there is no more smell of vinegar.


ⓘ **NOTE:** This operation may be dangerous if other substance are used instead of vinegar or approved de-scaling materials recommended for household coffee makers.

Cleaning

❶ Use a damp cloth to clean the body of the machine and do not use abrasive detergents.

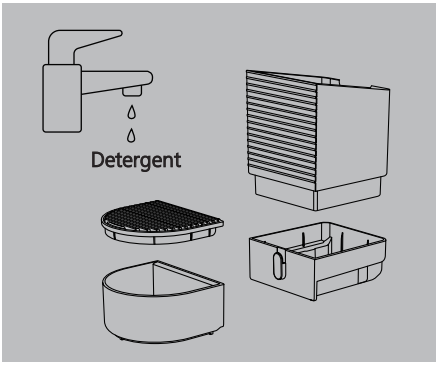

❷ Remove the used capsule container and drip tray and empty them. Wash them with an ordinary dishwashing. detergent.

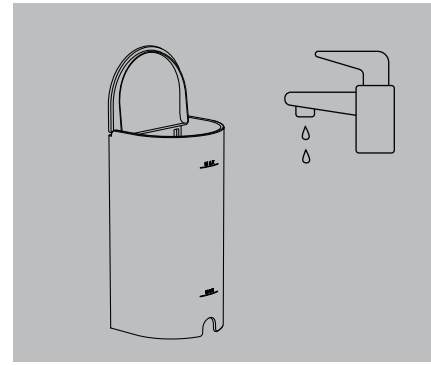

❸ Periodically remove the water tank and rinse it with clean water.

Trouble Shooting

If the machine is not working properly make the simple checks set out below. If the problem is not among those listed or if it still persists, even if you follow the advice given, contact an authorized dealer.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Machine can not start.	Not properly plugged into the power.	Make sure it is properly plugged in.
The coffee is too cold.	The machine is not ready.	Wait until the temperature is reached, shown by the indicator light.
Coffee is not being dispensed or it is being done too slowly.	Not enough water in the tank.	Make sure that the level of the water in the tank is right, and if necessary, add cold natural water.

Dismantling

- Taking the machine out of use must be done by authorized staff. The pressure of the water circuit must be fully lowered; the power cord disconnected and any substances potentially harmful to the environment must be disposed of legally and properly.
- Keep the machine out of the reach of children or unqualified persons.
- If the machine is to be disposed as waste, it must be taken to a centre authorized for recycling electrical and electronic equipment (*). This is to protect the environment and humans from any possible harm. For more information about recycling please contact the offices of the municipality concerned, the domestic waste disposal service or the retailer.
- Do not dispose of the material in the environment.



Label affixed to the machine as identification according to Directive RAEE/WEEE (2002/06/(*) EC) on Waste Electrical and Electronic Equipment, destined for the European Market.

Additional Warnings

- If the plug of the machine does not fit into the socket have the plug changed by a qualified person who should also make sure that the section of the wires of the plug are suitable for the power absorbed by the machine. The use of adaptors, multiple sockets and/or extension cords is not advised. If they have to be used it is necessary to use only simple or multiple adaptors and extension cords compliant with the safety regulations in force and to make sure the capacity limit is not exceeded.
- There are basic rules to be observed when using electrical equipment. In particular:
  -do not touch or use the equipment with wet or damp hands or in bare feet;
  -do not pull on the power lead or the equipment itself for unplugging it;
  -do not allow the equipment be used by children or unskilled persons without supervision.
- If the machine is broken or not working properly, shut it off and do not tamper with it. If repairs are needed, only go to an authorised dealer. Non-compliance with the foregoing could affect the safety of the machine.
- If you decide not to use the machine any more, you must put it out of commission by cutting the power cord, after unplugging the plug from the socket. It is also advisable to make safe any parts of the machine that could be a danger, especially for children who might play with the unused machine.
- Installation must be done according to the manufacturer's instructions. Improper installation can cause harm to persons, animals or things, for which the manufacturer cannot be held responsible.
- To avoid dangerous overheating, it is advisable to unwind the whole power cord and only to use the machine as advised in the "Instructions for Use" section.
- If the power cord of the machine is damage it must only be replaced by the authorized dealer.
- The manufacturer can not be held responsible for any harm to persons, animals or things arising from improper and unreasonable use of the machine and for repairs done by unqualified persons.

Specifications

Model: 3A-C276F
Voltage: AC 220-240V
Frequency: 50-60Hz
Power: 1200W
Safe grade: Class I
Water tank capacity: 470ml
Approximate weight: 2.551 kg
Product dimensions: L342 x W93 x H211mm
Cable length: approx. 1000mm
Operating noise: ≤60dB(A)
Used capsule container capacity: 8-10 capsules
Standby time: 9min
Preheating time: approx. 40s

Customer Care Service

Thank you for purchasing our product.
Our goal is to make sure that you are completely satisfied with your purchase.

Welcome to leave your valuable opinions and suggestions by following method:

MINI 2.0 Coffee Appliance

Model: 3A-C276F